

"Nanocrystalline Processing and Interface Engineering of Si₃N₄-based Nanocomposites"

Technical Report on ONR Grant No. N00014-95-1-0626
for the period of July 1, 1997 - September 30, 1997

Jackie Y. Ying
St. Laurent Associate Professor
Department of Chemical Engineering
Massachusetts Institute of Technology
Room 66-544, 77 Massachusetts Avenue
Cambridge, MA 02139-4307
Tel: (617) 253-2899
FAX: (617) 258-5766

Nanocrystalline TiN Processing and Properties

With careful powder handling procedures and processing, the nanocrystalline TiN powders produced in our novel reactor undergo tremendous densification at 1400°C in a simple, pressureless sintering process to produce dense (99%) TiN materials [1]. In this quarter, efforts were devoted to microscopy studies of the nanocrystalline TiN to demonstrate that the mechanical properties are influenced by the ceramic microstructure [2]. Long ion milling times were required in order to prepare TiN samples for transmission electron microscopy due to the extreme hardness of this advanced ceramic material.

As shown in the previous report, the hardness values of the nanocrystalline TiN are among the highest reported in the literature [1]. Table 1 compares mechanical properties of TiN ceramics prepared using three different handling procedures: (1) pressureless sintering after exposing the TiN powders to air (EXP), (2) pressureless sintering while avoiding air exposure until after a pre-sintering step at 800°C (UN800), and (3) hot isostatic pressing (HIP) at 200 MPa without air exposure until final densification has been accomplished [3]. In all cases the sintering temperature was 1400°C.

Table 1. Mechanical properties of TiN sintered at 1400°C.

Sample	Hardness (GPa)	Fracture Toughness (MPa m ^{1/2})
EXP	15.7 ± 0.7	—
UN800	23.2 ± 1.9	4.0 ± 0.2
HIP	22.4 ± 1.5	4.2 ± 0.2

The hardness results indicate that there was a clear benefit to avoiding exposure to air prior to pre-sintering at 800°C, but that there was no improvement with the use of applied pressures up to 200 MPa. Figure 1 shows a SEM image of an EXP sample which had significant amounts of a second phase which was determined by EDAX to be oxygen-rich. The second phase was dispersed throughout the sample in small regions (20-100 nm) or larger regions (500-1000 nm), and substantial cracking was apparent at the interfaces. The phase segregation and cracking are likely responsible for the lower hardness value for the EXP sample.

19971027 084

THIS QUALITY INSPECTED 4

DISTRIBUTION STATEMENT A

Approved for public release;
Distribution Unlimited

Transmission electron microscopy (TEM) images of the UN800 and HIP samples are shown in Figures 2 and 3. Both preparations produced TiN materials that are fully dense (i.e., with no observable pores) by 1400°C without the need of sintering additives. The sample underwent normal grain growth during sintering, producing equiaxed grains of consistently ultrafine crystal sizes. Grain sizes were 140 ± 15 nm for the UN800 sample and 155 ± 20 nm for the HIP sample. High-resolution electron microscopy (HREM) images of these sintered TiN materials are presented in Figures 4 and 5. These micrographs clearly show the sharpness of the interfaces between grains. There were no observable glassy phases at the grain boundaries or triple junctions, which often result from the use of oxides added as sintering aids. Glassy interfaces are often the cause of diminished mechanical properties, especially at high temperatures. The use of nanocrystalline starting powders and careful handling procedures have eliminated the need for sintering aids, enabling densification to occur at a relatively low temperature of 1400°C. The resulting high-purity TiN materials with ultrafine microstructure give rise to outstanding properties, such as high hardness for structural applications.

A comparison of samples HIPed at different temperatures demonstrated that the application of pressure during sintering did not induce full densification at temperatures lower than 1400°C. Figures 6 and 7 are scanning electron microscopy (SEM) images of TiN HIPed at 200 MPa at 1350°C and 1400°C, respectively. The grain size of the 1350°C sample is 80 nm, compared to 155 nm in the 1400°C sample. However, the 1350°C sample is less than 95% dense, while the 1400°C sample is 99% dense. The pressure dependence of sintering behavior can be explained by examining the driving force for the final stages of densification:

$$DF = (2\gamma/\rho + P_{app}/\delta) \quad (1)$$

where γ is the surface energy, ρ is the pore radius, P_{app} is the applied pressure, and δ is the density relative to theoretical. Where $\rho = 2.15$ nm, for typical values of $\gamma = 1$ J/m², $P_{app} = 200$ MPa, and $\delta = 0.90$, the first term ($2\gamma/\rho$) is 930 MPa while the second term (P_{app}/δ) is only 222 MPa. The small particle size and non-agglomerated nature of the starting powders produce compacts with a narrow size distribution of ultrafine pores. These characteristics cause the surface energy term to dominate the densification driving force throughout the entire range of densification, obviating the need for applied pressure. Most importantly, as the material nears full density and the pore size shrinks to zero, the surface energy term increases while the applied pressure term decreases [4]. Consequently, it is not necessary to apply pressure to our TiN to achieve full densification at 1400°C. We obtain similar densities and grain sizes by pressureless sintering or by HIPing. For conventional materials with particles in the 1 μ m size range, the applied pressure would be the controlling factor in densification.

The microstructure and interfacial chemistry of the UN800 TiN were further examined using scanning transmission electron microscopy (STEM). Equipped with a windowless X-ray detector that has very high geometrical efficiency, STEM provides exceptional X-ray microanalytical capability with superb imaging resolution (1.4 Å). It was used to determine the composition of grains and grain boundaries in the sintered UN800 sample. We found no distinct variation in the composition throughout the sample. Such compositional uniformity and absence of oxide-containing interface will lead to superior mechanical properties and thermal stability, which are subjects of future studies.

Summary

Microscopy studies of nanocrystalline TiN produced in our laboratory and densified through a pressureless sintering process show a consistent ultrafine microstructure with grains of 140 nm and no glassy intergranular or secondary phases. Comparison of nanostructured TiN ceramics processed by different methods demonstrates that there is a clear benefit to avoiding exposure of the starting powders to air, but that pressure application during sintering (e.g., by HIPing at 200 MPa) was not necessary to achieve full densification at 1400°C. STEM analysis of a fully-dense UN800 TiN ceramic found no oxygen-rich regions in the grains or grain boundaries.

References

- [1] J.Y. Ying, ONR Technical Report, June 30, 1997.
- [2] D.T. Castro and J.Y. Ying, "Microstructure and Mechanical Properties of Nanocrystalline Titanium Nitride," to be submitted to *J. Am. Ceram. Soc.*
- [3] D.T. Castro and J.Y. Ying, "Processing and Densification of Nanocrystalline Titanium Nitride," to be submitted to *J. Am. Ceram. Soc.*
- [4] D.T. Castro, "Synthesis, Processing, and Properties of Nanocrystalline Nitrides," Sc.D. Thesis, Massachusetts Institute of Technology, Sept. 1997.

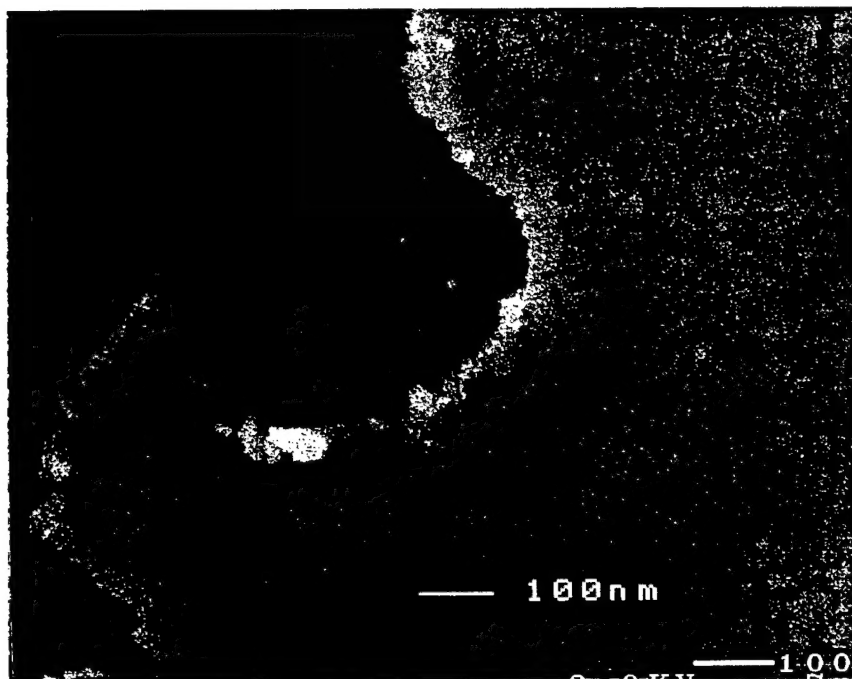


Figure 1. SEM image of nano-TiN EXP sintered at 1400°C.



Figure 2. TEM image of nano-TiN UN800 sintered at 1400°C.

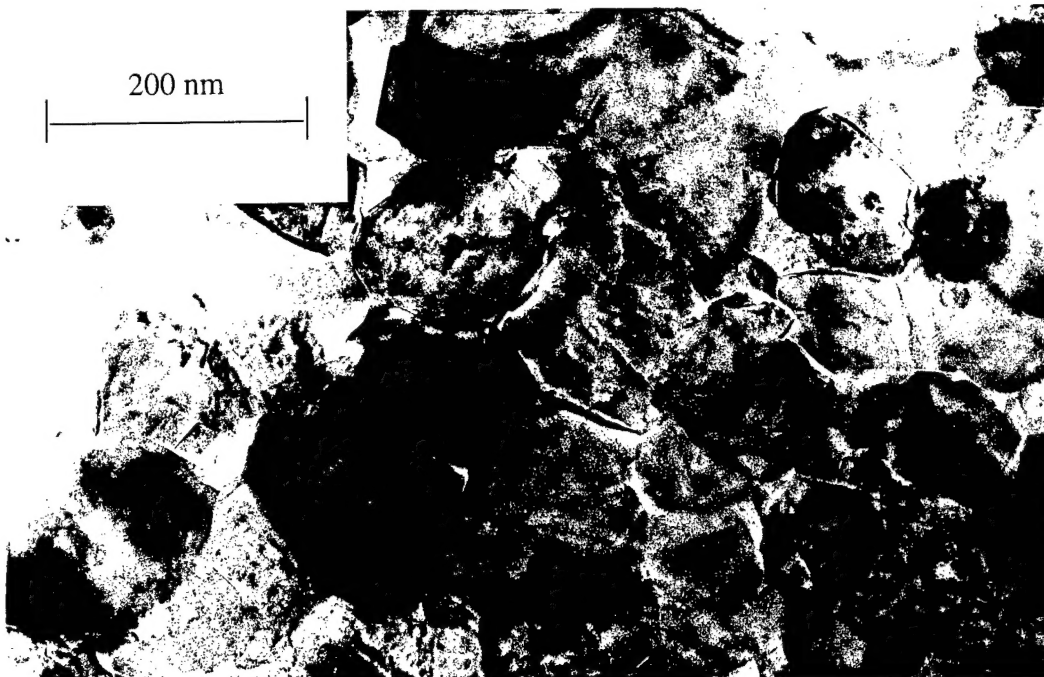


Figure 3. TEM image of nano-TiN HIPed at 1400°C, 200 MPa.

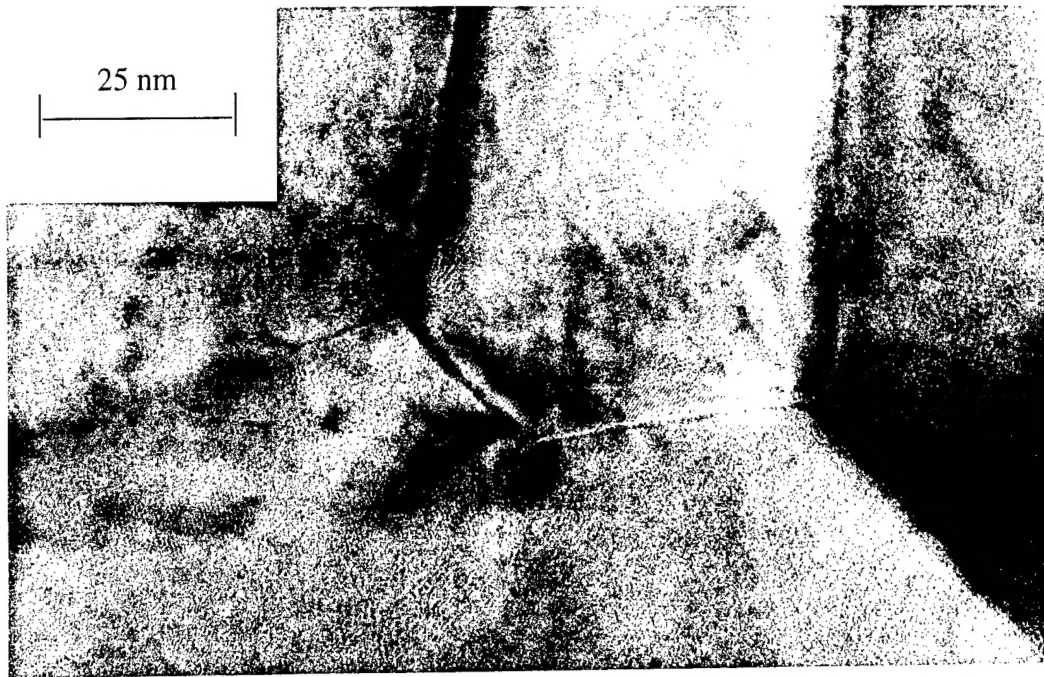


Figure 4. HREM image of triple junctions in nano-TiN UN800 sintered at 1400°C.

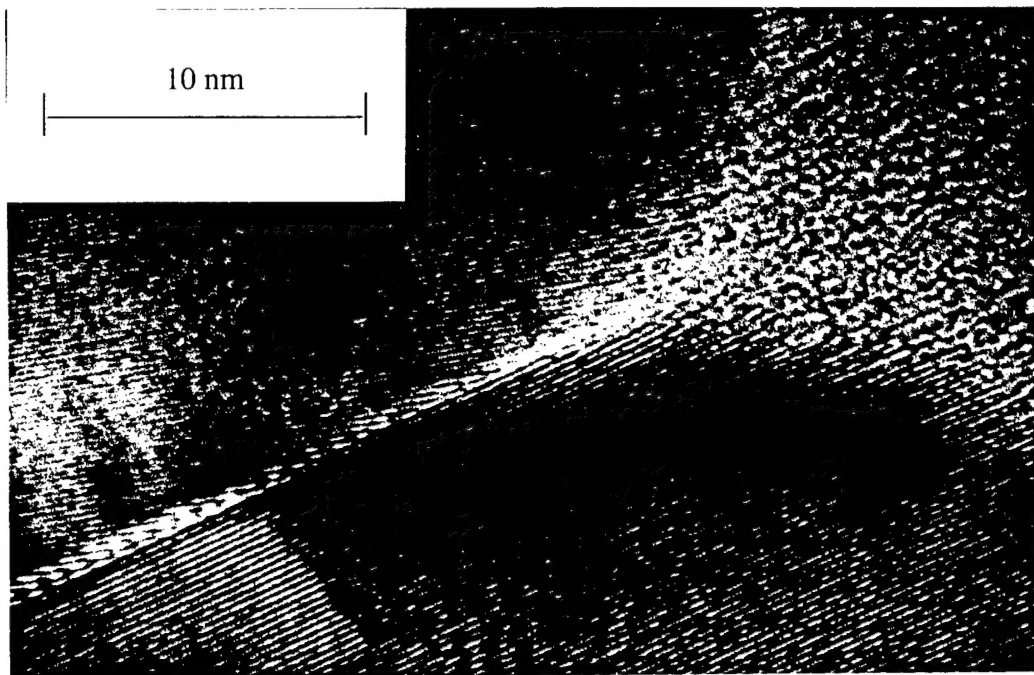


Figure 5. HREM image of intersection of grains with (111) and (200) orientations in nano-TiN UN800 sintered at 1400°C.

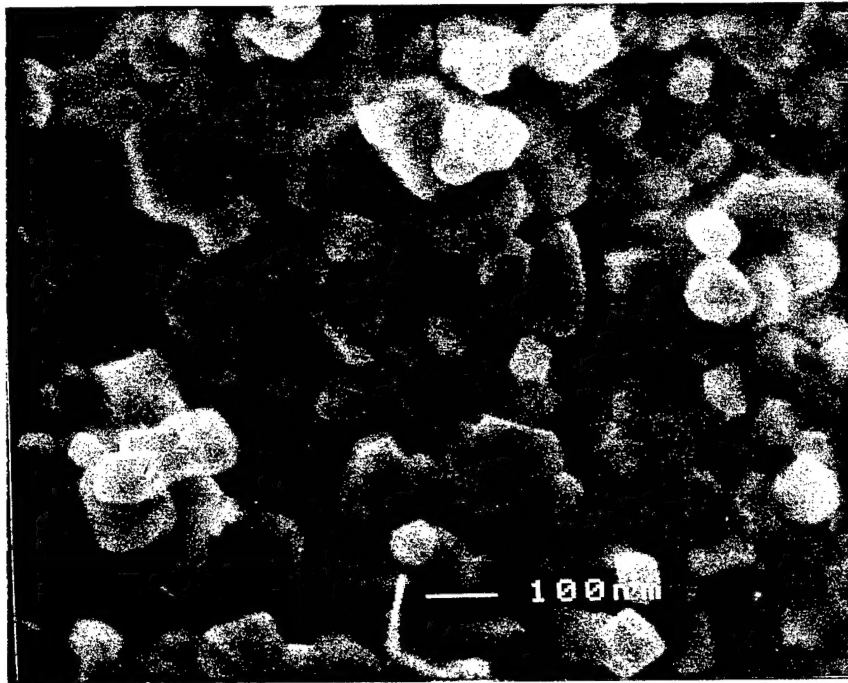


Figure 6. SEM image of nano-TiN HIPed at 1350°C, 200 MPa (<95% dense).



Figure 7. SEM image of nano-TiN HIPed at 1400°C, 200 MPa (99% dense).

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
<small>PUBLIC REPORTING BURDEN FOR THE COLLECTION OF INFORMATION IS ESTIMATED TO AVERAGE 1 HOUR PER RESPONSE, INCLUDING THE TIME FOR REVIEWING INSTRUCTIONS, SEARCHING EXISTING DATA SOURCES, GATHERING AND MAINTAINING THE DATA NEEDED, AND COMPLETING AND REVIEWING THE COLLECTION OF INFORMATION. SEND COMMENTS REGARDING THIS BURDEN ESTIMATE OR ANY OTHER ASPECT OF THIS COLLECTION OF INFORMATION, INCLUDING SUGGESTIONS FOR REDUCING THIS BURDEN, TO: WASHINGTON HEADQUARTERS SERVICES, DIRECTORATE FOR INFORMATION OPERATIONS AND REPORTS, 1215 JEFFERSON DAVIS HIGHWAY, SUITE 1204, ARLINGTON, VA 22202-4302, AND TO THE OFFICE OF MANAGEMENT AND BUDGET, PAPERWORK REDUCTION PROJECT (0704-0188), WASHINGTON, DC 20503.</small>				
1. AGENCY USE ONLY (Leave blank)		2. REPORT DATE 1 Oct 97		3. REPORT TYPE AND DATES COVERED Progress Report 1 Jul 97 - 30 Sep 97
4. TITLE AND SUBTITLE Synthesis and Processing of Nanocrystalline Titanium Nitride			5. FUNDING NUMBERS G - N00014-95-1-0626	
6. AUTHOR(S) Jackie Y. Ying				
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Department of Chemical Engineering Massachusetts Institute of Technology 77 Massachusetts Avenue, Room 66-544 Cambridge, MA 02139-4307			8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Office of Naval Research 800 North Quincy Street Ballston Tower One Arlington, VA 22217-5660			10. SPONSORING/MONITORING AGENCY REPORT NUMBER	
11. SUPPLEMENTARY NOTES				
12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution unlimited.			12b. DISTRIBUTION CODE	
13. ABSTRACT (Maximum 200 words) This report describes the microstructural characterization of nanocrystalline titanium nitride (TiN) produced in our forced flow reactor. Microscopy studies of TiN densified through a pressureless sintering process show a consistent ultrafine microstructure with grains of 140 nm and no glassy intergranular or secondary phases. Comparison of TiN ceramics processed by different methods demonstrates that there is a clear benefit to avoiding exposure of the starting powders to air, but that pressure application during sintering (e.g., by HIPing at 200 MPa) was not necessary to achieve full densification at 1400°C. STEM analysis of a fully-dense UN800 TiN ceramic found no oxygen-rich regions in the grains or grain boundaries.				
14. SUBJECT TERMS Nanocrystalline Processing, Titanium Nitride			15. NUMBER OF PAGES 7	
			16. PRICE CODE	
17. SECURITY CLASSIFICATION OF REPORT UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT UNCLASSIFIED	20. LIMITATION OF ABSTRACT UL	